



soft starter-ATS22control 220V-power 230V(45kW)/400...440V(90kW)

ATS22C17Q

Main

Range of product	Altistart 22	
Product or component type	Soft starter	
Product destination	Asynchronous motors	
Product specific application	Pumps and fans	
Component name	ATS22	
Network number of phases	3 phases	
[Us] rated supply voltage	230440 V - 1510 %	
Motor power kW	45 kW 230 V 90 kW 400 V 90 kW 440 V	
Factory setting current	162 A	
Power dissipation in W	91 W for standard applications	
Utilisation category	AC-53A	
Type of start	Start with torque control (current limited to 3.5 ln)	
IcL starter rating	170 A for connection in the motor supply line for standard applications	
IP degree of protection	IP00	

Complementary

Assembly style	With heat sink	
Function available	Internal bypass	
Supply voltage limits	195484 V	
Supply frequency	5060 Hz - 1010 %	
Network frequency	4566 Hz	
Device connection	To the motor delta terminals In the motor supply line	
[Uc] control circuit voltage	230 V - 1510 % 50/60 Hz	
Control circuit consumption	20 W	
Discrete output number	2	
Discrete output type	Relay outputs R1 230 V running, alarm, trip, stopped, not stopped, starting, ready C/O Relay outputs R2 230 V running, alarm, trip, stopped, not stopped, starting, ready C/O	
Minimum switching current	100 mA at 12 V DC (relay outputs)	

5 A 250 V AC resistive 1 relay outputs 5 A 30 V DC resistive 1 relay outputs 2 A 250 V AC inductive 0.4 20 ms relay outputs 2 A 30 V DC inductive 7 ms relay outputs	
3	
(LI1, LI2, LI3) logic, 5 mA 4.3 kOhm	
24 V <= 30 V	
Positive logic LI1, LI2, LI3 at State 0: < 5 V and <= 2 mA at State 1: > 11 V, >= 5 mA	
0.41 lcl adjustable	
750 Ohm	
Modbus	
1 RJ45	
Serial	
RS485 multidrop	
4800, 9600 or 19200 bps	
31	
Phase failure: line Thermal protection: motor Thermal protection: starter	
CE	
Forced convection	
Vertical +/- 10 degree	
356 mm	
150 mm	
229.5 mm	
18 kg	
3050 kW at 200240 V 3 phases 55100 kW at 380440 V 3 phases	
Soft starter	
Conducted and radiated emissions level A conforming to IEC 60947-4-2 Damped oscillating waves level 3 conforming to IEC 61000-4-12 Electrostatic discharge level 3 conforming to IEC 61000-4-2 Immunity to electrical transients level 4 conforming to IEC 61000-4-4 Immunity to radiated radio-electrical interference level 3 conforming to IEC 61000-4-3 Voltage/current impulse level 3 conforming to IEC 61000-4-5	
EN/IEC 60947-4-2	
CSA C-Tick GOST UL CCC	
1 gn (f= 13200 Hz) conforming to EN/IEC 60068-2-6 1.5 mm (f= 213 Hz) conforming to EN/IEC 60068-2-6	
15 gn for 11 ms conforming to EN/IEC 60068-2-27	
56 dB	
Level 2 conforming to IEC 60664-1	
Level 2 conforming to IEC 60664-1	

Operating altitude	<= 1000 m without derating > 1000< 2000 m with current derating of 2.2 % per additional 100 m	
Packing Units		

Unit Type of Package 1	PCE
Number of Units in Package 1	1
Package 1 Height	25.0 cm
Package 1 Width	33.0 cm
Package 1 Length	41.0 cm
Package 1 Weight	13.218 kg
Unit Type of Package 2	P06
Number of Units in Package 2	4
Package 2 Height	73.5 cm
Package 2 Width	80.0 cm
Package 2 Length	60.0 cm

64.064 kg

Offer Sustainability

Package 2 Weight

Sustainable offer status	Green Premium product	
REACh Regulation	REACh Declaration	
EU RoHS Directive	Pro-active compliance (Product out of EU RoHS legal scope) EU RoHS Declaration	
Mercury free	Yes	
China RoHS Regulation	China RoHS declaration	
RoHS exemption information	Yes	
Environmental Disclosure	Product Environmental Profile	
Circularity Profile	End of Life Information	
WEEE	The product must be disposed on European Union markets following specific waste collection and never end up in rubbish bins	

Contractual warranty


<i>N</i> arranty	18 months		
------------------	-----------	--	--

ATS22C17Q

Dimensions Drawings

Frame Size C

Dimensions

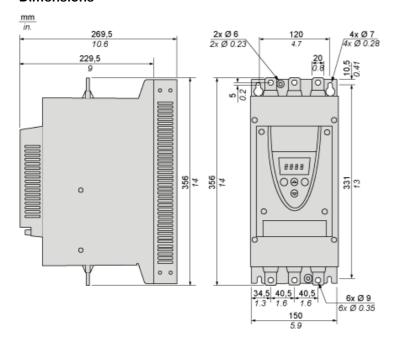

ATS22C17Q

Mounting and Clearance

Precautions

Standards

The Altistart 22 soft starter is compliant with pollution Degree 2 as defined in NEMA ICS1-1 or IEC 60664-1.

For environment pollution degree 3, install the Altistart 22 soft starter inside a cabinet type 12 or IP54.

A DANGER


HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

ATS22 soft starters are open devices and must be mounted in a suitable enclosure.

Failure to follow these instructions will result in death or serious injury.

Air Circulation

Leave sufficient free space to help the air required for cooling purposes to circulate from the bottom to the top of the unit.

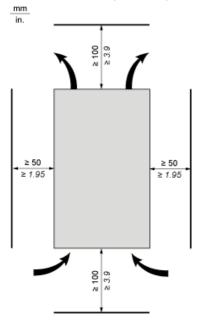

Overheating


To avoid the soft starter to overheat, respect the following recommendations:

- Mount the Altistart 22 Soft Starter within ± 10° of vertical.
- Do not locate the Altistart 22 Soft Starter near heat radiating elements.
- Electrical current through the Altistart 22 Soft Starter will result in heat losses that must be dissipated into the ambient air immediately surrounding the
- If several soft starters are installed in a control panel, arrange them in a row. Do not stack soft starters. Heat generated from the bottom soft starter ca

Mounting and Clearance

Mounting

Connection Between the Fan and the Altistart 22 Soft Starter

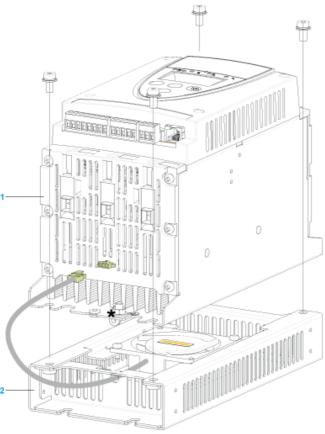

- 1 Altistart 22 Soft Starter
- **2** Fa

ATS22C17Q

Mounting and Clearance

Wall mounted or Floor-standing Enclosure with IP 23 Degree of protection

 
Introduction

To help proper air circulation in the soft starter, grilles and forced ventilation can be installed.

Ventilation Grilles



Forced Ventilation Unit



ATS22C17Q

Connections and Schema

Power Terminal

Bar Style



Power supply and output to motor	Bar	b	20 mm (0.79 in)
		а	5 mm (0.2 in)
		Bolt	M8 (0.31 in)
	Cable and protective cover	Size	95 mm²
		Gauge	250 MCM
		Protective cover	LA9F702
		Tightening torque	18 N.m
			157.5 lb.in


Power connections, minimum required wiring section

	UL cable AWG (Cu 75°C/167°F) (1)
70	4/0

Connections and Schema

230 Vac control, logic Inputs (LI) 24 Vdc, 3-wire control


With Line Contactor, Freewheel or Controlled Stop

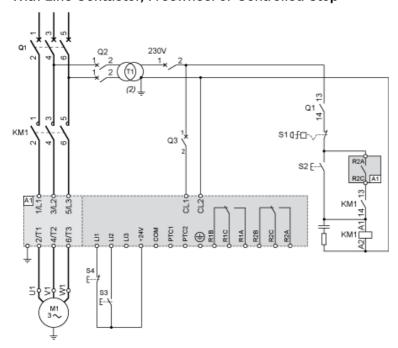

ATS22C17Q

Connections and Schema

230 Vac control, logic Inputs (LI) 24 Vdc, 2-wire control, freewheel stop

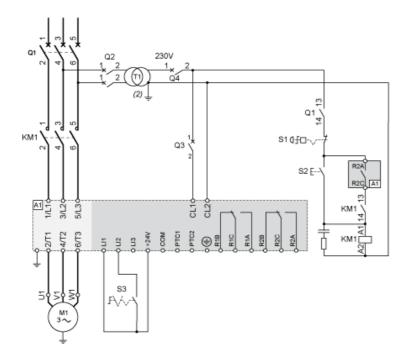

ATS22C17Q


Connections and Schema

Connection in the motor delta winding in series with each winding

Wiring

ATS22 soft starters connected to motors with the delta connections can be inserted in series in the motor windings.

The following wiring requieres particular attention. It is documented in the Altistart 22 Soft start - soft stop unit user manual. Please contact Schneider Electric commercial organisation for further informations.

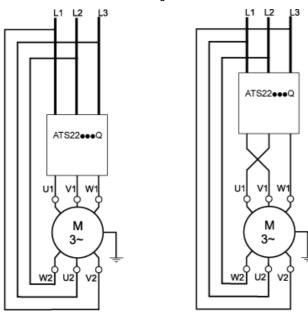


Example

A 400 V - 110 kW motor with a line current of 195 A (nominal current for the delta connection). The current in each winding is equal to 195/1.5 or 130 A. The rating is determined by selecting the soft starter with a permanent nominal current (ICL) just above this current.

Performance Curves

Motor Thermal Protection - Cold Curves

Curves

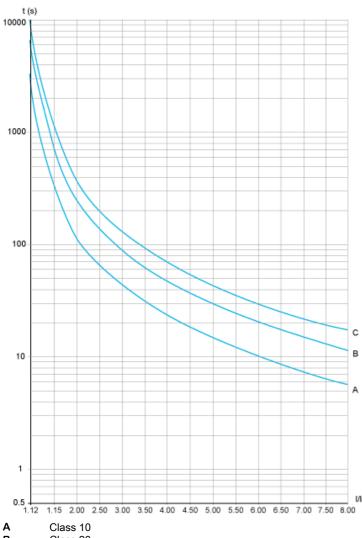

B Class 30 C Class 30

Trip time for a Standard Application (Class 10)

3.5 ln 32 s

Trip time for a Severe Application (Class 20)

3.5 ln 63 s

Trip time for a Severe Application (Class 30)

3.5 ln 95 s


12

ATS22C17Q

Performance Curves

Motor Thermal Protection - Warm Curves

Curves

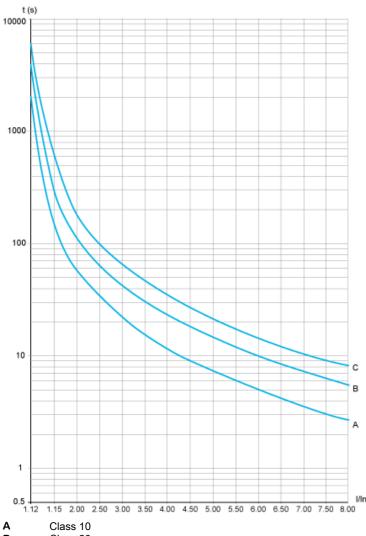

B Class 30 C Class 30

Trip time for a Standard Application (Class 10)

•	, , , , , , , , , , , , , , , , , , , ,
3.5 ln	
16 s	

Trip time for a Severe Application (Class 20)

3.5 ln	
32 s	

Trip time for a Severe Application (Class 30)

3.5 ln	
48 s	

Recommended replacement(s)